

OLYMPUS®

CAMEDIA

INSTRUCTIONS

DIGITAL CAMERA

C-3000ZOOM

PREPARATION

BASIC FUNCTIONS


MOVIE FUNCTIONS

**STORING DATA FOR PRINTING
PICTURES**

USING A PERSONAL COMPUTER

CAMERA SETTINGS

MISCELLANEOUS

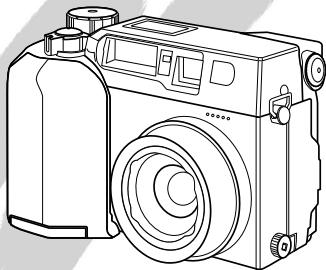

- Before using your camera, read this manual carefully to ensure correct use.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.

IMPORTANT SAFETY INSTRUCTIONS

Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to obtain optimum performance and a longer service life from the unit. Be sure to retain this manual for future reference.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.



The lightning flash with the arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING:
TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN, ANY LIQUID OR MOISTURE.

1. **Read Instructions** — All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** — The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** — All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions** — All operating and use instructions should be followed.
5. **Cleaning** — Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments** — Attachments not recommended by the product manufacturer may be hazardous and/or cause damage to the product. Do not use these attachments.
7. **Water and Moisture** — Do not use this product near water — for example, near a bath tub, kitchen sink, or laundry tub, in a wet basement, near a swimming pool or rain.
8. **Accessories** — Do not place this product on an unstable stand, tripod, bracket, table, or cart. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a tripod, stand, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. **Power Sources** — This product should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

10. **Grounding or Polarization** — This product, when used with an optional AC adapter, may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.
11. **Power-Cord Protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
12. **Lightning** — For added protection for this product when used with an optional AC adapter during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
13. **Overloading** — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
14. **Object and Liquid Entry** — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
15. **Servicing** — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

16. **Damage Requiring Service** — If using the optional AC adapter, unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) If liquid has been spilled, or objects have fallen into the product.
 - b) If the product has been exposed to rain or water.
 - c) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - d) If the product has been dropped or damaged in any way.
 - e) When the product exhibits a distinct change in performance — this indicates a need for service.
17. **Replacement Parts** — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or which have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
18. **Safety Check** — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
19. **Heat** — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Radio and Television Interference

Change or modifications not expressly approved by the manufacturer may void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the camera and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Only the Olympus RS-232C serial cable or Olympus USB cable should be used to connect the camera to a personal computer (PC).

Declaration of Conformity

Model Number: C-3000ZOOM

Trade Name: OLYMPUS

Responsible party: Olympus America Inc.

Address: 2 Corporate Center Drive, Melville, New York 11747-3157
U.S.A.

Telephone number: 516-844-5000

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

WARNING

- Keep the batteries away from children.
- If a battery is swallowed, see a doctor immediately.
- Dispose of used lithium batteries promptly, in a safe manner that complies with all applicable laws.
- The lithium battery may present the risk of fire or chemical burn if mishandled.
- Do not recharge, disassemble, heat above 212°F (100°C) or dispose of in a fire.
- Before use, wipe the battery clean with a dry soft cloth to assure good contact.
- Never use metallic tweezers to hold the battery, and never short circuit the (+) and (-) sides of the battery.

Windows® is a registered trademark of Microsoft Corporation.

Macintosh™ is a trademark of Apple Computer Inc.

All other brand names and product names are registered.

The standards for camera file systems are the "Design Rule for Camera File System/DCF" standards stipulated by the Japan Electronics Industry Development Association (JEIDA).

Legal and other notices

- All contents of this publication are subject to change without notice.
- Although the contents of this publication have been carefully checked to avoid errors, some may still occur. If you are in doubt about any points or find mistakes or omissions, please contact us.
- No part of this publication may be reproduced or reprinted except for personal use without the prior permission of Olympus.
- Olympus makes no representations or warranties regarding any damages, or benefit expected by using this unit lawfully, or any request from a third person, which are caused by the inappropriate use of this unit.
- Olympus makes no representations or warranties regarding any damages or any benefit expected by using this unit lawfully which are caused by erasing the picture data.
- Olympus reserves all rights to this manual.

FOR SAFE USE



Danger: Ignoring this Danger mark and operating this product incorrectly may lead to serious injury or death.



Warning: Ignoring this Warning mark and operating this product incorrectly may lead to serious injury or death.



Caution: Ignoring this Caution mark and operating this product incorrectly may lead to injury.

BATTERY HANDLING

IGNORING THE WARNINGS BELOW MAY LEAD TO FLUID LEAK, BATTERY HEAT GENERATION, FIRE, EXPLOSION, ELECTRIC SHOCK OR BURNING.



DANGER

1. WHEN USING NiMH BATTERIES, USE OLYMPUS BRAND NiMH BATTERIES AND CHARGER.
2. DO NOT LOAD OR USE BATTERIES WITH THEIR +/- TERMINALS UPSIDE DOWN. DO NOT LOAD BATTERIES FORCEFULLY.
3. DO NOT MODIFY OR DISASSEMBLE BATTERIES OR CONNECT THEM TO THE CAMERA USING SOLDER OR IN ANY OTHER WAY THAN INSTRUCTED IN THIS MANUAL. IT MAY DESTROY THE TERMINALS OR CAUSE BATTERY FLUID TO LEAK.
4. DO NOT CONNECT THE TERMINALS WITH METAL OR CARRY/STORE BATTERIES WITH METALLIC NECKLACES OR HAIRPINS.
5. DO NOT CONNECT THE CAMERA DIRECTLY TO A POWER OUTLET OR CIGARETTE LIGHTER IN A VEHICLE.
6. DO NOT THROW BATTERIES INTO FIRE OR HEAT THEM.
7. IF BATTERY FLUID GETS IN YOUR EYES, DO NOT RUB THEM. WASH THE FLUID OUT WITH CLEAN WATER AND CONTACT A PHYSICIAN IMMEDIATELY.



WARNING

1. DO NOT ALLOW BATTERIES TO COME IN CONTACT WITH WATER OR SEA WATER.
2. BATTERY FLUID MAY LEAK, GENERATING HEAT AND POSSIBLY CAUSING A FIRE OR EXPLOSION.
 - DO NOT USE NON-RECOMMENDED BATTERIES.
 - DO NOT THROW BATTERIES INTO A FIRE, OR EXPOSE TO HEAT. DO NOT DISASSEMBLE THE UNIT WITH BATTERIES INSIDE.
 - DO NOT USE OLD AND NEW OR CHARGED AND UNCHARGED BATTERIES, OR BATTERIES OF DIFFERENT CAPACITIES/KINDS/ BRANDS MIXED TOGETHER.
 - DO NOT CHARGE ALKALINE AND LITHIUM BATTERIES.
 - DO NOT LOAD THE BATTERIES IN THE OPPOSITE DIRECTION TO THAT SHOWN IN THESE INSTRUCTIONS.
 - DO NOT USE BATTERIES IF THEIR BODY IS NOT COVERED BY THE INSULATING SHEET OR IF THE SHEET IS TORN AS IT MAY CAUSE FLUID LEAK, FIRE OR INJURY. DO NOT USE THESE BATTERIES EVEN IF THEY ARE SOLD IN STORES.
3. IF NiMH BATTERIES ARE NOT CHARGED WITHIN THE SPECIFIED TIME, STOP CHARGING.
4. DO NOT USE BATTERIES IF A FLUID LEAK, CHANGE OF COLOR/SHAPE OR OTHER ABNORMALITY IS FOUND.
5. STORE AND USE BATTERIES OUT OF CHILDREN'S REACH. IF A CHILD SWALLOWS BATTERIES, CONTACT A PHYSICIAN IMMEDIATELY.
6. IF BATTERY FLUID GETS ON SKIN OR CLOTHES, SOAK IT WITH CLEAN WATER AS IT MAY BURN THE SKIN.
7. DO NOT MODIFY THE BATTERY COMPARTMENT ON THE CAMERA OR INSERT FOREIGN OBJECTS IN IT.



CAUTION

1. OLYMPUS NiMH BATTERIES ARE FOR USE WITH OLYMPUS DIGITAL CAMERAS ONLY. DO NOT USE THEM WITH OTHER EQUIPMENT.
2. DO NOT APPLY PHYSICAL SHOCK TO BATTERIES.
3. DO NOT USE CHARGEABLE AND UNCHARGEABLE BATTERIES OR BATTERIES OF DIFFERENT CAPACITIES/KINDS/BRANDS MIXED TOGETHER.
4. WHEN CHARGING NiMH BATTERIES, CHARGE ALL FOUR (OR TWO) BATTERIES AT THE SAME TIME.
5. CHARGE NiMH BATTERIES BEFORE USING THEM FOR THE FIRST TIME OR AFTER NOT USING THEM FOR A LONG TIME.
6. KEEP BATTERIES UNLOADED WHEN NOT IN USE FOR A LONG TIME, AS IT MAY CAUSE FLUID LEAK OR HEAT GENERATION.
7. DO NOT USE BATTERIES IF A FLUID LEAK, CHANGE OF COLOR/SHAPE OR OTHER ABNORMALITY IS FOUND, AND TAKE THEM TO AN AUTHORIZED OLYMPUS SERVICE CENTER.
8. DO NOT USE OR STORE BATTERIES UNDER DIRECT SUNLIGHT OR IN HOT TEMPERATURES SUCH AS IN A HOT VEHICLE OR IN FRONT OF A HEATER.
9. DO NOT UNLOAD BATTERIES IMMEDIATELY AFTER USING THE CAMERA FOR A LONG TIME AS THEY GET HOT.

HANDLING



WARNING

1. NEVER TRY TO USE THE FLASH WHEN TAKING PICTURES OF PEOPLE (ESPECIALLY INFANTS) AT CLOSE RANGE. THE CAMERA'S FLASH MAY DAMAGE THE SUBJECT'S EYES AT CLOSE RANGE. DO NOT TAKE PICTURES OF CHILDREN FROM A DISTANCE OF LESS THAN THREE FEET.
2. DO NOT AIM YOUR CAMERA DIRECTLY AT THE SUN OR OTHER EXTREMELY BRIGHT OBJECTS. THIS MAY DAMAGE YOUR EYES.
3. DO NOT USE THIS CAMERA IN THE VICINITY OF FLAMMABLE OR EXPLOSIVE GAS.
4. DO NOT LEAVE THIS CAMERA WITHIN THE REACH OF INFANTS OR CHILDREN.
 - THE CHILD MIGHT PUT THE STRAP AROUND HIS OR HER NECK. THIS COULD CAUSE STRANGULATION OR CHOKING.
 - THE CHILD MIGHT SWALLOW BATTERIES OR SMALL ATTACHMENTS. IF THIS HAPPENS, CONTACT A PHYSICIAN IMMEDIATELY.
 - THE CHILD MIGHT ACTIVATE THE FLASH FROM TOO CLOSE AND CAUSE DAMAGE TO HIS OR HER EYES.
 - THE CHILD MAY BE INJURED.
5. DO NOT STORE THE CAMERA IN HUMID OR DUSTY PLACES. THIS MAY CAUSE FIRE OR ELECTRIC SHOCK.
6. DO NOT COVER THE FLASH WITH YOUR HAND DURING OPERATION. DO NOT TOUCH THE FLASH AFTER FIRING IT CONTINUOUSLY. YOU MAY GET BURNED.
7. IF YOU DROP THE CAMERA IN WATER OR GET WATER INSIDE IT, UNLOAD THE BATTERIES IMMEDIATELY AND CONTACT YOUR NEAREST OLYMPUS SERVICE CENTER. LEAVING BATTERIES IN A WET CAMERA MAY CAUSE FIRE OR ELECTRIC SHOCK.

CAUTION

1. IF YOU NOTICE AN UNUSUAL SMELL, NOISE, OR SMOKE EMITTING FROM THIS CAMERA, UNLOAD THE BATTERIES CAREFULLY TO AVOID BEING BURNED. (WHEN UNLOADING BATTERIES, DO IT OUTSIDE AWAY FROM FLAMMABLE OBJECTS, AND DO NOT TOUCH BATTERIES WITH YOUR BARE HANDS.) CONTACT YOUR NEAREST OLYMPUS SERVICE CENTER IMMEDIATELY.
2. NEVER ATTEMPT TO DISASSEMBLE THIS CAMERA. IT CONTAINS HIGH-VOLTAGE CIRCUITRY THAT MAY CAUSE ELECTRIC SHOCK AND INJURY.
3. DO NOT OPERATE THE CAMERA WITH WET HANDS AS YOU MAY GET AN ELECTRIC SHOCK.
4. DO NOT STORE THE CAMERA IN ANY PLACE EXPOSED TO EXCESSIVE HEAT. THIS MAY WEAKEN THE PARTS OR CAUSE A FIRE.

CARE AND STORAGE

HANDLING

- Do not use or store the camera in places exposed to direct sunlight (e.g. a beach in summer), excessive heat, humidity, extreme variations of temperature and humidity, sand or dust, excessive moisture, or vibrations (e.g. in a car).
- Do not use or store the camera near a heater, cooler, or humidifier, or near a fire, magnetic fields, or volatile materials.
- Do not shake the camera or subject it to shocks.
- Do not leave the camera with its lens pointing towards direct sunlight. This will damage the lens.
- Do not leave the camera unused for a long period of time. This may cause battery leakage and can lead to problems including the growth of mold in the camera. Before using, press the Shutter release button to check operation.
- Do not turn the camera when it is mounted on a tripod. Turn the tripod head instead.
- Do not touch any of the camera's internal parts.
- Do not use the flash for extended periods as this can cause the flash to become excessively hot. Do not touch the flash when it is hot.
- Do not improperly open or modify the camera, as it may result in a shock or injury.



BATTERY HANDLING

- For the battery, use 2 CR-V3 lithium battery packs or 4 AA NiMH batteries, NiCd batteries, alkaline batteries or lithium batteries.
- Performance will be limited with alkaline batteries, especially in low temperatures. NiMH batteries are recommended.
- AA manganese batteries cannot be used.
- Use the batteries correctly. Incorrect use can cause fluid leakage, heat generation, or other damage. When replacing batteries, be sure to load them correctly.
- The batteries may be temporarily disabled when exposed to cold temperatures. Try to keep the camera and batteries warm when using the camera in a cold environment. Batteries that are weak in cold temperatures will be restored under normal temperatures.
- Sweat, oil, etc. can prevent a battery's terminals from making electrical contact. To avoid this, wipe both terminals before loading the battery.
- Keep spare batteries on hand when going on a long trip. New batteries may be difficult or impossible to obtain abroad.
- When using NiMH batteries or NiCd batteries, make sure to charge them fully with the correct battery charger.
- Read instructions carefully before handling NiMH batteries or NiCd batteries.
- NEVER use any battery whose body is not covered by the insulating sheet, as it may cause a fire or injury.
- Recommended Temperature when Using NiMH Batteries
Operation: 32 ~ 104°F, Charge: 32 ~ 104°F, Storage: -4 ~ 86°F
(Usage outside this temperature range may limit battery performance or shorten battery life. Unload batteries from the camera when not in use.)

Important

- “Note” indicates information you should be aware of.
- Actual product may differ slightly from that shown in illustrations.

CONTENTS

Important safety instructions.....	2
For safe use.....	8
Care and storage.....	12
Battery handling.....	13
Main features.....	19

1 PREPARATION.....21

Checking the contents.....	22
Names of parts.....	24
Attaching the strap.....	27
Loading the batteries.....	28
Using the AC adapter (optional).....	30
Inserting SmartMedia.....	32
Adjusting the date and time.....	34
Learning the basics.....	36
Basic operating procedure.....	36
How to use the Mode dial.....	37
Holding the camera.....	38
Adjusting the diopter.....	39
Proper shutter release.....	39
Checking the card.....	40
Checking the batteries.....	41
Checking the number of storable pictures.....	42
How to use the menu.....	44

2 BASIC FUNCTIONS.....47

[Record Mode]

Taking pictures.....	48
Taking pictures using the optical viewfinder.....	48
Taking pictures using the LCD monitor.....	50
Quick view.....	52
Focus lock.....	53
Autofocus.....	54
Working range.....	56
AE lock.....	57
Aperture priority mode.....	58

Shutter priority mode	59
Manual mode.....	61
Zoom	62
Exposure compensation	63
Using the flash.....	64
Spot metering mode	68
Macro mode.....	69
Macro + Spot metering mode	70
Manual focus	71
Still picture record menu.....	73
Sequence mode	74
Selftimer/Remote control	76
Auto bracket	80
White balance.....	82
ISO	84
Flash correction	86
Slow shutter synchronization flash mode	88
Extension flash photography	90
Taking photographs using the FL-40 extension flash	90
Taking photographs with the FL-40 extension flash only	92
Taking photographs with another brand of extension flash.....	93
Digital zoom mode.....	96
Picture effects.....	98
Sound record mode	99
Panorama mode	101
Card setup (card format)	103
Selecting the recording mode.....	105
A/S/M mode.....	107
[Display Mode]	
Displaying recorded pictures	108
Index-display mode.....	110
Close-up display mode (3X inspection).....	111
Protection.....	112
One-frame erase.....	113
Still picture display menu	114

CONTENTS (Cont.)

Slide-show mode	115
Picture information	116
Recording sound	118
Card setup	120
All-frame erase	120
Card format	122
Connecting to a television	124

3 MOVIE FUNCTIONS127

[Record Mode]

Recording movies	128
Recording movies using the LCD monitor	128
Quick view	130
Focus lock	131
Working range	132
Zoom	133
Exposure compensation	134
Manual focus	135
Movie picture record menu	137
Selftimer/Remote control	138
White balance	142
ISO	144
Picture effect	146
Card setup (card format)	147
Selecting the recording mode	149

[Display Mode]

Movie picture display menu	151
Playing movies	152
Picture information	154
Functions	156
Creating an index	156
Editing a movie	158
Card setup	160
All-frame erase	160
Card format	162

4	STORING DATA FOR PRINTING PICTURES	165
	About print settings.....	166
	Print-reserve	168
	All-frame print reserve	168
	Single-frame print reserve	170
	Trimming print reserve	174
	Resetting print reserve.....	177
5	USING A PERSONAL COMPUTER	179
	Computer system requirements	180
	Installing provided software	181
	Connecting to a personal computer.....	182
	Using a personal computer.....	183
	Transferring data from SmartMedia.....	184
	PC card adapter	184
	FlashPath floppydisk adapter	184
	SmartMedia READER/WRITER	184
	Using CAMEDIA Master	185
	Processing images using CAMEDIA Master	187

CONTENTS (Cont.)

6	CAMERA SETTINGS	192
	All reset.....	194
	Custom settings.....	196
	Sharpness	199
	TIFF settings.....	200
	SQ1, SQ2 settings.....	202
	Beep sound	204
	Full-time AF	205
	Rec view	207
	File number.....	212
	LCD brightness.....	215
	Meters/Feet selection	217
	Index-display adjustment.....	218
7	MISCELLANEOUS	219
	Questions and answers	220
	Troubleshooting.....	222
	System chart.....	226
	Error codes	227
	Optional items.....	229
	Notes on display and backlight.....	229
	Compatibility of the picture data	230
	Specifications	231

MAIN FEATURES

- This camera's 3,340,000-pixel CCD and Olympus high-resolution optical lens deliver the highest picture quality in its class.
- Various exposure modes make advanced shooting possible.
- The Olympus high-resolution 3X optical zoom lens plus the Digital Zoom make possible photographs equivalent to 7.5X zoom.
- Movie function incorporated that lets you record up to approx. 23 seconds in the SQ mode and approx. 92 seconds in the HQ mode when an 8MB card is used.
- Sound can be simultaneously recorded with a movie. Sound can also be recorded with a picture, either when it is shot or afterward.*
- In addition to an optical viewfinder, a 1.8" (4.5 cm) wide-angle TFT LCD monitor is provided for more flexibility when composing shots and viewing images (view can be enlarged 3 times).
- Easy operation with Mode dial and Menu screen.
- A removable SmartMedia (SSFDC) memory card (with Panorama function) is provided.
- With the provided Video output connector, pictures can be viewed on a TV.
- Pictures can be reserved in SmartMedia cards to be printed on printers or at photo labs that support the DPOF system.

MAIN FEATURES (Cont.)

- **USB-compatible.** Either a serial or USB interface can be used to connect to a personal computer.
- **Write times are shorter,** enabling the camera to be ready for the next shot quicker.
- **When the FL-40 extension flash (optional) is used,** sophisticated flash photographs can be taken.

* Sound cannot be played back by this camera. Connect it to a TV or personal computer for sound playback.

CAMEDIA


1

PREPARATION


OLYMPUS DIGITAL CAMERA

CHECKING THE CONTENTS


Camera

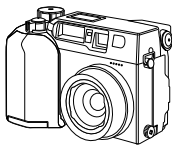


Strap

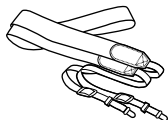


Remote control

 

A/V cable

 


Warranty card

 


Lens cap



Instructions/Remote control instructions

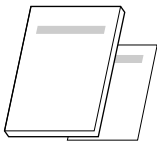

CR-V3 lithium battery pack (2 packs)

 


Software CD's



USB cable



 SmartMedia
(SSFDC-8MB)



Index labels (2 pieces)



Instructions



Static-free case




Write-protect adhesive
seals (4 pieces)



NAMES OF PARTS

CAMERA

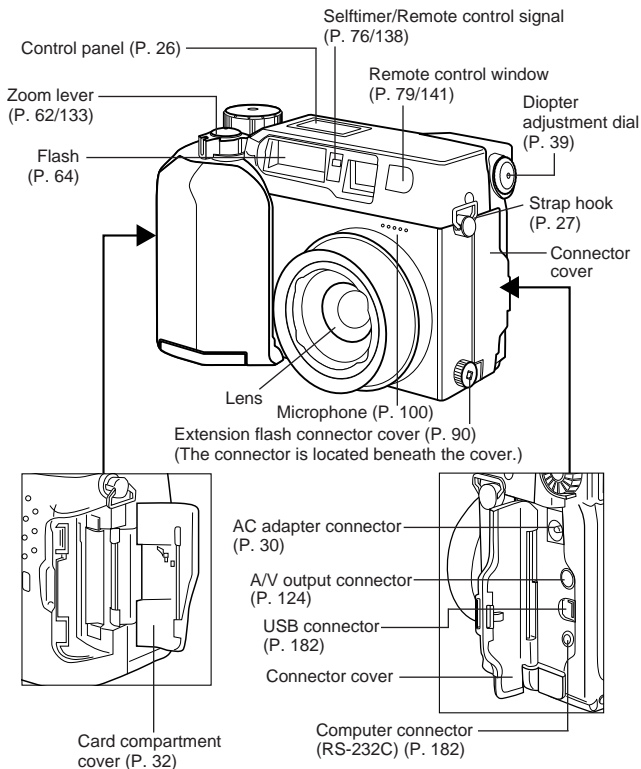

Flash button (P. 64) / Erase button
(P. 113)

Spot/Macro button
(P. 68) /
Print button (P. 168)

Viewfinder
(P. 25)

LCD monitor
(P. 26)

Battery compartment cover
(P. 28)

Mode dial (P. 37)

Jog dial (P. 44)

Shutter release button
(P. 39)

Zoom lever
(P. 62/133)

OK button (P. 45)
MF button (P. 72/
136)

Protect button
(P. 112)

LCD monitor
ON/OFF button
(P. 50/128)

 
Card access
lamp (P. 36/39)

Menu button
(P. 44)

Battery compartment open/close
switch (bottom) (P. 28)

Threaded mount (bottom)


VIEWFINDER DISPLAY



Autofocus mark (p. 48/53/131)/
Backlighting correction mark (p. 65)


NAMES OF PARTS (Cont.)

CONTROL PANEL

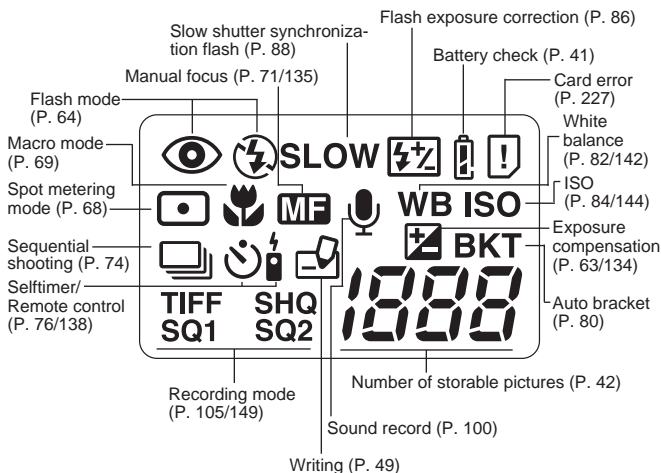


LCD MONITOR

(Display mode)

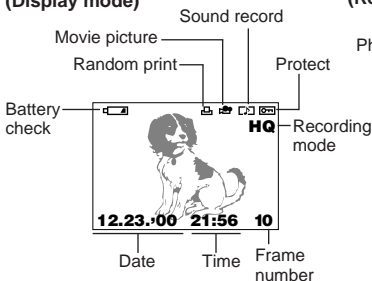


(Record mode)


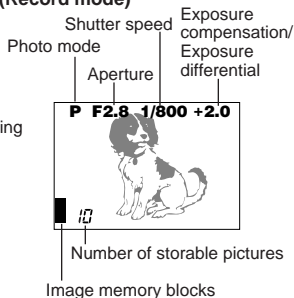


ATTACHING THE STRAP

Attach the strap to the strap hook on the camera.

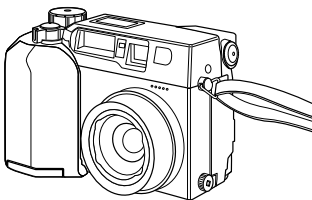

-
- 1** Thread the strap through the strap hook as shown in the illustration, then pull on it to make sure it is attached securely.

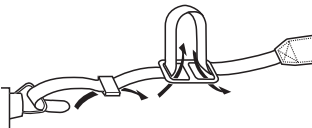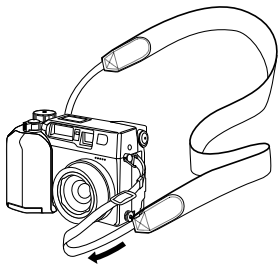


Caution:

- Attach the strap correctly as shown so that the camera does not fall off. If the strap is attached incorrectly and the camera comes loose and falls off, Olympus is not responsible for any damage.

LOADING THE BATTERIES

This camera uses 2 CR-V3 lithium battery packs or 4 AA NiMH batteries, alkaline batteries or lithium batteries.

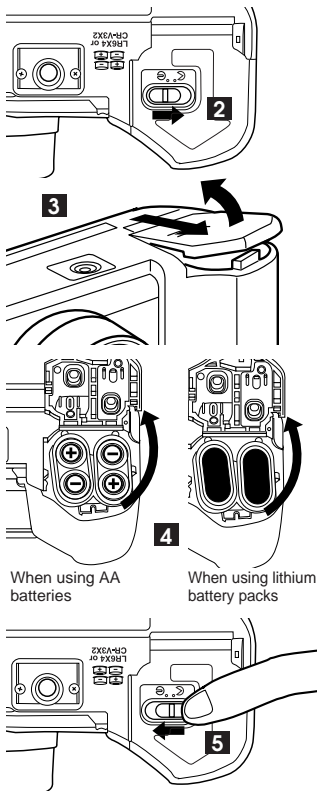


- 1 Make sure that the camera power is off.
- 2 Slide the opening and closing switch on the battery cover in the direction of ➤.
- 3 Slide the battery cover in the direction of the arrow printed on it with your fingertip to open it.
 - If you attempt to open it using a fingernail, it could result in injury.
- 4 Insert the batteries with their poles oriented in the right direction.
 - Insert the battery packs with the CAMEDIA labels facing outward and the concave terminals facing each other.
- 5 Close the battery cover, then press it down and slide it in the opposite direction of the arrow printed on it. Slide the opening and closing switch on the battery cover in the direction of ☹. The switch will not lock unless the cover is completely closed.
 - When pressing the battery cover shut, be sure to press the center of the cover since it may be difficult to close properly by pressing the edge.

Note:


- CR-V3 lithium battery packs cannot be charged.
- Alkaline batteries have a lot of variation in their performance and deteriorate particularly at low temperatures. It is recommended that lithium battery packs or NiMH batteries be used.
- Manganese batteries cannot be used. Please read the cautions concerning batteries. (See page 13.)
- Do not touch the inside of the battery compartment.
- If the terminals inside the battery compartment are dirty, it will markedly shorten the life of the batteries.
- If the camera is left for 1 hour with the batteries removed, all the internal settings will revert to the default settings.



 
These batteries cannot be used.



 
Batteries whose body is only partially covered, or not covered at all, by the insulating sheet.



 Batteries whose \ominus terminal is flat and a part of the terminal is covered by the insulating sheet.





 
Batteries whose \ominus terminal is raised but not covered by the insulating sheet.



Batteries whose \ominus terminal is flat and not covered by the insulating sheet.

USING THE AC ADAPTER (Optional)

An optional Olympus AC adapter allows you to power your digital camera from a common AC wall outlet.

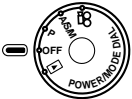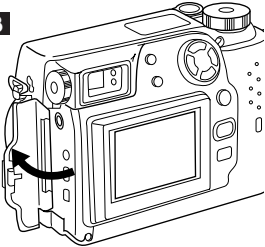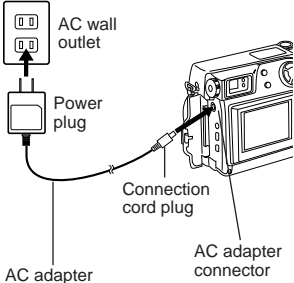-
- **1** Make sure that the camera power is off.
 - 2** Plug the AC adapter into a power outlet.
 - **3** Open the Connector cover and plug the AC adapter into the AC adapter connector on the camera.
 - **4** To disconnect, turn off the power, and unplug the AC adapter first from the camera then from the outlet.

Note:

- When in use for long periods, the AC adapter may get warm. This is normal.



 
Warning:

Incorrect use may cause a fire or electric shock.


- Be sure to use an Olympus AC adapter. Olympus is not responsible for any damage caused by the use of other kinds of AC adapters.
- Use an AC120V power source.
- NEVER connect or disconnect the AC adapter with wet hands.
- If the cord of the AC adapter is hot, smells like smoke or is emitting smoke, unplug it immediately and contact your nearest authorized Olympus service center.
- Make sure that the camera power is off before connecting or disconnecting the AC adapter.
- Make sure the AC adapter is properly plugged into the outlet.
- When disconnecting, hold the body, not the cord, of the AC adapter. Never pull, bend, twist or modify the cord.
- If there is any damage on the cord or if there is a contact failure, stop using it and contact your nearest authorized Olympus service center.
- Keep the AC adapter disconnected when the camera is not in use.

INSERTING SmartMedia


Insert the SmartMedia card in the direction shown.



- 1 Make sure that the camera power is off.

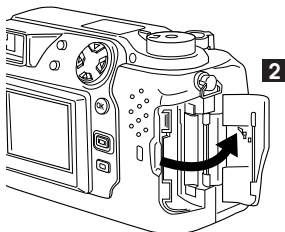


- 2 Open the Card compartment cover.

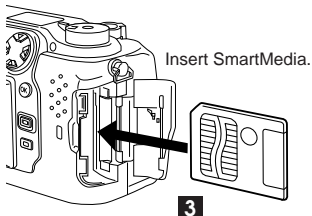

- 3 Insert the SmartMedia card in the direction shown in the illustration.

- Note the orientation of the card. If it is inserted incorrectly, it may become jammed.
- When using a special function SmartMedia card (optional), insert it in the same way.

- 4 Close the cover tightly.

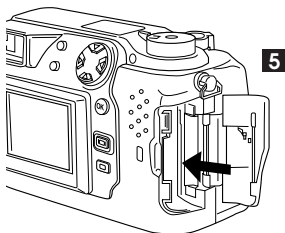

- 5 To eject the card, turn off the power, open the Card compartment cover and push the card.

Push the card to eject it.

Note:

- **Use 3V (3.3V) cards only.** 5V cards cannot be used.
- Olympus brand cards are recommended (already formatted). Non-Olympus brand cards must be formatted by the camera.
- When using a special function SmartMedia card (optional), insert it in the same way.




Caution:


- **NEVER** open the card cover, eject the card, remove the batteries, or pull the plug while the camera is in operation. It may destroy the data in the card.
- The card is a precision instrument. Handle it carefully and do not subject it to physical shocks.
- Do not touch the contact area of the card.

ADJUSTING THE DATE AND TIME

You can adjust the date and time.



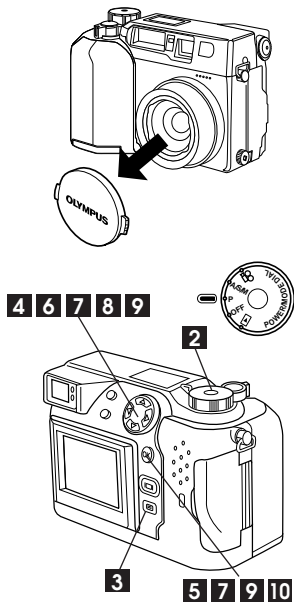


LCD monitor

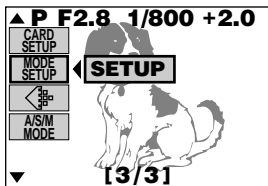

(Still picture record menu)

- 1 Remove the lens cap.
- 2 Set the Mode dial to P, A/S/M, or .
 - When no images are recorded in a card, set it to a mode other than .
- 3 Press the Menu button to display the Menu.
- 4 Press the top/bottom arrows on the Jog dial to select MODE SETUP, then press the right arrow.
- 5 Select SETUP, then press the OK button to display the Mode setting screen.
- 6 Press the top/bottom arrows on the Jog dial to select .
- 7 Press the right arrow on the Jog dial to select SETUP, then press the OK button.

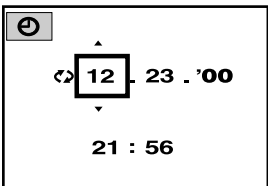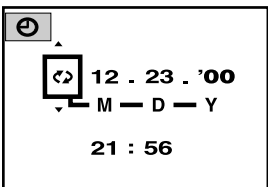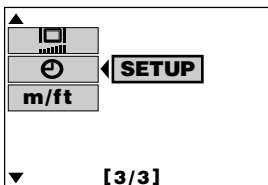

8 Select the date order using the top/bottom arrows on the Jog dial. Press the right arrow on the Jog dial to adjust the first setting (month/day/year).

9 Press the top/bottom arrows on the Jog dial to adjust the first setting, then press the right arrow on the Jog dial to adjust the second setting. Repeat until the minute is adjusted. Press the OK button.

- For accurate setting, press the OK button when the clock hits 00 seconds.
- '00 will appear for the year 2000.


10 Press the OK button to save the setting. Press again to cancel the Menu.



Caution:


- The adjusted date will be canceled when the camera is left without batteries for approx. one hour (based on our tests). In such a case, adjust the date again.

Note:

- We recommend that you check the date and time before taking important pictures.
- The setting will remain until it is readjusted.
- When the Mode dial is set to , the card must contain images in order to display the Menu.



LEARNING THE BASICS

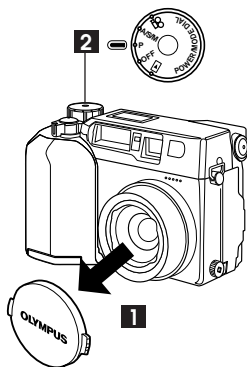
BASIC OPERATING PROCEDURE



1 Remove the lens cap.

2 Set the Mode dial to P, A/S/M,  or  to turn on the power.

 - A/S/M, P and  set the camera to the Record Mode. The lens will come out and the remaining battery power as well as the number of storable pictures will be displayed on the control panel.
-  sets the camera to the Display mode. The LCD monitor will be turned on.



3 After use, set the Mode dial to **OFF** to turn off the power.


- The lens will retract and the LCD monitor and control panel will turn off.
- Be sure to replace the lens cap on the camera when it is not in use.

Note:

- Do not turn on the power without removing the lens cap first.
- NEVER open the card cover, eject the card, remove the batteries, or pull the plug while the camera is in operation (while the Card access lamp is blinking). It may destroy the data in the card.
- If you do not operate the camera for three minutes, the camera will be set to the stand-by mode. After four hours in the stand-by mode, the power turns off automatically. (Time varies depending on the type of batteries used.)
- The recorded images will remain in the card even after the power is turned off or the batteries are replaced.

HOW TO USE THE MODE DIAL

You can easily turn the camera on or off or change the mode using the Mode dial.

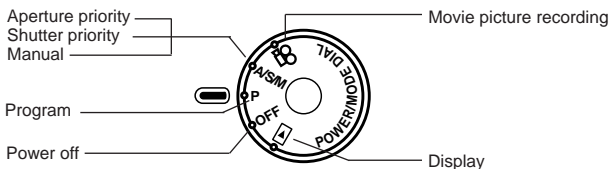

P or A/S/M (Still picture recording) (p. 48 ~ 107)

With P, the camera selects the optimal aperture and the shutter speed automatically.

With A/S/M, you can set the aperture or the shutter speed or both for yourself. (p. 58 ~ 61)

(Movie picture recording)

You can shoot movies of up to approx. 92 seconds in length in the SQ mode and 23 seconds in the HQ mode (when an 8MB card is used).
(p. 128 ~ 149)

OFF (Power off)

(Display)

You can observe the pictures you have taken.

LEARNING THE BASICS (Cont.)


HOLDING THE CAMERA

Hold the camera firmly with both hands while keeping your elbows at your sides to prevent the camera from moving.


Proper



Proper

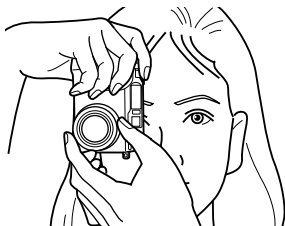


Improper

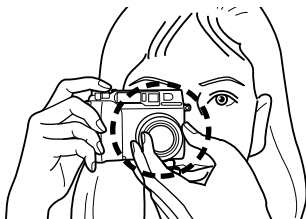

Note:

- Do not subject the lens to physical shocks.
- Keep your fingers and the strap away from the lens and flash.
- When shooting vertically-oriented pictures, hold the camera so that the flash is at the top.


ADJUSTING THE DIOPTER

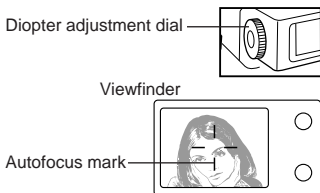

- Turn the Diopter adjustment dial to see the Autofocus mark clearly.


PROPER SHUTTER RELEASE

 Press the Shutter release button halfway to lock the focus and exposure.



- The Green lamp next to the viewfinder lights.
- If the Green lamp blinks, the focus or exposure is not locked.
- To focus the camera when the subject of the picture is outside the auto focus mark, use focus lock. (p. 53/131)

 Press the Shutter release button fully to release the shutter and take the picture.



- The camera emits a beep sound when the shutter is released.
- The Card access lamp blinks while the picture is being recorded.

Note:

 
- Press the Shutter release button gently using the ball of your finger.
- Avoid moving the camera when pressing the Shutter release button to prevent blurry pictures.

LEARNING THE BASICS (Cont.)

CHECKING THE CARD


When the power is turned on in the Record Mode, the camera checks the SmartMedia card.

Control panel



Card error

 
Viewfinder




Green lamp

When there is no SmartMedia card in the camera / the card is protected:

 The Card error indicator on the control panel and the Green lamp blink.



LCD monitor

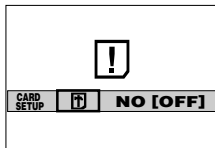

When the card needs to be formatted:

The Card error indicator on the control panel lights, and the Card format confirmation screen appears. Select **F** to enter the Card format mode. (p. 103)

CHECKING THE BATTERIES

When the power is turned on in the Record Mode, the remaining battery power will be displayed on the control panel.



lights and turns off automatically.

Batteries are OK. You can shoot.



blinks and other indicators on the control panel are displayed normally.

Battery power is low and batteries should be replaced.



blinks and other indicators on the control panel go out.

Batteries are dead and should be replaced immediately.

- The timing of each battery level indicator varies depending on the type of batteries used.
- If NiMH batteries are used, the battery low warning will blink faster than when lithium battery packs are used.

 
Note:

- When taking pictures on a special occasion, on a trip, or in cold temperatures, keep spare batteries handy. (p. 13)
- When the camera is being operated on batteries that are running low, the camera may emit several short beeps and blink the number of storable pictures on the control panel after you take a shot or when you turn on the power. If this happens, the picture you have just taken will not turn out properly. Replace the batteries and take the picture again.

LEARNING THE BASICS (Cont.)

CHECKING THE NUMBER OF STORABLE PICTURES

When the power is turned on in the Still Picture Record Mode, the number of storable pictures will appear on the control panel. (For movie pictures, the seconds remaining will appear.)



Number of storable pictures



Seconds remaining

- The Green lamp blinks and CARD FULL appears on the LCD monitor when the number reaches 0. (p. 227)
- The number of storable pictures varies depending on the selected recording mode. See page 105 for selecting the recording mode.

Number of Still Pictures that can be Taken (without sound)

Recording mode		Number of pixels	File	Memory capacity					
				2MB	4MB	8MB	16MB	32MB	64MB
TIFF		2048 x 1536	TIFF	0	0	0	1	3	6
		1600 x 1200		0	0	1	2	5	11
		1280 x 960		0	1	2	4	8	17
		1024 x 768		0	1	3	6	13	27
		640 x 480		2	4	8	17	34	68
SHQ		2048 x 1536	JPEG	1	2	4	8	17	35
HQ		2048 x 1536		2	5	10	21	42	84
SQ1	HIGH (quality)	1600 x 1200		1	3	6	12	25	51
	NORMAL			3	7	16	31	64	128
	HIGH (quality)	1280 x 960		2	5	10	21	42	84
	NORMAL			5	12	24	49	99	199
SQ2	HIGH (quality)	1024 x 768		3	6	13	26	53	107
	NORMAL			9	18	37	76	153	306
	HIGH (quality)	640 x 480		7	16	32	66	132	266
	NORMAL			20	40	82	165	331	665

Number of Still Pictures that can be Taken

(with sound)

Recording mode		Number of pixels	File	Memory capacity					
				2MB	4MB	8MB	16MB	32MB	64MB
TIFF		2048 x 1536	TIFF	0	0	0	1	3	6
		1600 x 1200		0	0	1	2	5	11
		1280 x 960		0	1	2	4	8	17
		1024 x 768		0	1	3	6	13	27
		640 x 480		1	4	8	16	33	66
SHQ		2048 x 1536	JPEG	1	2	4	8	17	34
HQ		2048 x 1536		2	4	10	20	40	81
SQ1	HIGH (quality)	1600 x 1200		1	3	6	12	25	50
	NORMAL			3	7	15	30	60	120
	HIGH (quality)	1280 x 960		2	4	10	20	40	81
	NORMAL			5	11	22	45	90	181
SQ2	HIGH (quality)	1024 x 768		3	6	12	25	51	102
	NORMAL			7	16	32	66	132	266
	HIGH (quality)	640 x 480		6	14	28	58	117	234
	NORMAL			15	30	61	123	248	498

- If the recording mode is set to TIFF, sound will not be recorded with a picture when the Mode dial is set to P or A/S/M, but it can be added later during playback. (p. 118)

Seconds that Movies can be Photographed


Recording mode	Number of pixels	Memory capacity			
		2MB	4MB	8MB	Over 16MB
HQ	320 x 240	5	11	23	30
SQ	160 x 120	22	45	92	120

Note:

- Because the amount of data used varies depending on the subject, more/fewer pictures than the number shown may be photographed.
- The number of storable pictures may not be reduced every time a picture is taken, or increased when a picture is erased.
- Numerical values are approximate.

LEARNING THE BASICS (Cont.)

HOW TO USE THE MENU

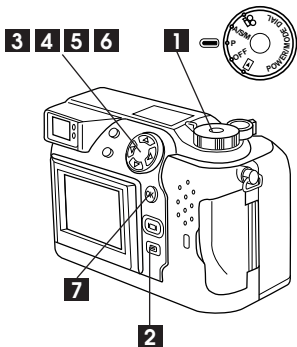

.....

1 Set the Mode dial.


2 Press the Menu button to display the Menu.

3 Press the top/bottom arrows on the Jog dial to select the item to adjust.

4 Press the right arrow on the Jog dial to display further selections.

To move the cursor vertically.

Jog dial

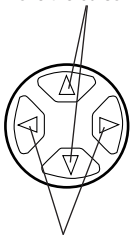


To move the cursor horizontally.


5 Press the top/bottom arrows to adjust the item.

6 When finished, press the left arrow on the Jog dial to confirm the adjustment.

7 Press the OK button to save the adjustment and cancel the Menu.

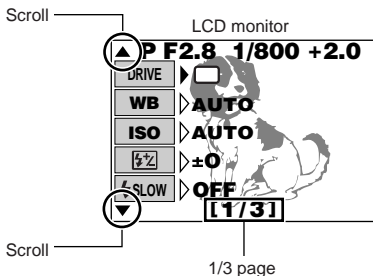

Note:

- When the Mode dial is set to , the card must contain images in order to display the Menu.
- In the Record Mode, you can take pictures without pressing the OK button. The adjustment will be valid until the Menu is canceled.
- Press the Menu button without pressing the OK button to cancel the adjustment and the Menu.
- Unless OFF is selected in All Reset, some adjustments will be canceled and reset to the default when the power is turned off. (p. 194)




2

BASIC FUNCTIONS

TAKING PICTURES

TAKING PICTURES USING THE OPTICAL VIEWFINDER

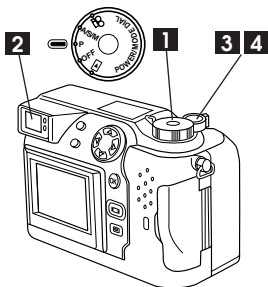


.....

1 Set the Mode dial to P or A/S/M.

2 Compose the picture by placing the subject within the autofocus marks in the viewfinder or using focus lock. (p. 53)

- Turn the Diopter adjustment dial to see the Autofocus mark clearly. (p. 39)

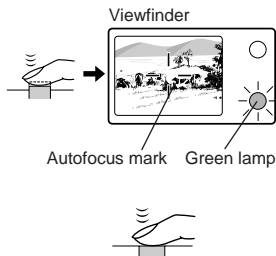

3 Press the Shutter release button halfway to lock the focus and exposure.

- The Green lamp next to the viewfinder lights.
- If the Green lamp blinks, the focus or exposure is not locked. Check the working distance. (p. 56)

4 Press the Shutter release button fully to take the picture.



5 When the Green lamp stops blinking (after about 0.5 ~ 43 seconds), the camera is ready to take the next picture.

- The Shutter will not release while the Green lamp is blinking.



Caution:


- **NEVER** open the card cover, eject the card, remove the batteries, or pull the plug while the Card access lamp is blinking.

Note:

- When the Orange lamp next to the viewfinder blinks, the flash is being charged. (p. 64)
- Printed images will be slightly larger compared with what you see in the viewfinder or on the LCD monitor.

TAKING PICTURES (Cont.)

TAKING PICTURES USING THE LCD MONITOR

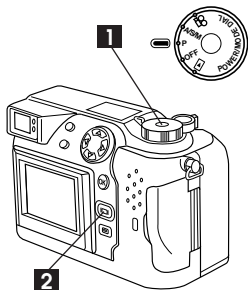


LCD monitor



Number of storable pictures

Image memory blocks

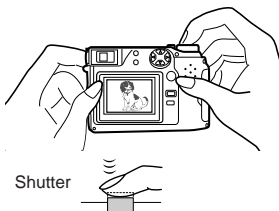

Shutter

.....

1 Set the Mode dial to P or A/S/M.

2 With P, press the LCD monitor ON/OFF button to turn on the LCD monitor.

- With A/S/M, the LCD monitor will turn on automatically.

3 Compose the picture using the LCD monitor.

4 Take the picture in the same way as you would when using the optical viewfinder. (p. 48)

- The lower image memory block will light and the camera will start storing the image in the card.
- Unless the card is full, the next picture can be taken even while the image is being stored, until all of the blocks light.
- When more than two images are recorded, the center block will light.
- When the buffer memory is full, the upper block will light and no other operation can be performed until the upper block goes off.
- When FULL-TIME AF is activated, pictures displayed on the LCD monitor are always in focus.

LCD monitor



5 When the recorded image is no longer displayed, the camera is ready to take the next picture.

- The recorded image will not be displayed if the Rec view is off. (p. 207)
- If CHECK is selected in REC VIEW in MODE SETUP, you can select whether to save the photographed image or erase it. (p. 208)


Note:

- Do not push the LCD monitor forcibly.
- Pictures that appear on the LCD monitor are for composition purposes only.
- It is recommended to use the optical viewfinder for less camera movement and battery consumption.
- It will take longer to record when the LCD monitor is used.
- When the subject is viewed diagonally in the camera, the edges may appear zigzagged on the LCD monitor. This is not a malfunction; it will be less noticeable in Display mode.
- A strip of light may appear on the top/bottom of the LCD monitor, but this is not a malfunction.
- When a picture is taken in a lighted area, such as in sunlight, vertical lines may appear on the LCD monitor. This is not a malfunction.
- Printed images will be slightly larger compared with what you see in the viewfinder or on the LCD monitor.

TAKING PICTURES (Cont.)

QUICK VIEW

You can immediately shift from the Record Mode to the Display mode, and check the picture you have just taken.

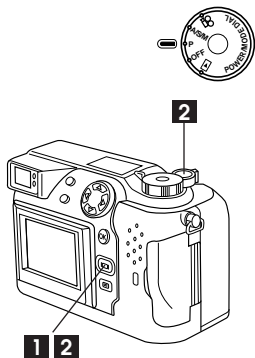

- 1** When the Mode dial is set to P or A/S/M, quickly press the LCD monitor ON/OFF button twice.

- The LCD monitor will display the last picture taken.

- 2** To return to the Record Mode, press the LCD monitor ON/OFF button or the Shutter release button.

FOCUS LOCK

If your main subject is not within the autofocus marks, follow the procedure below to obtain focus. This is called focus lock.

Viewfinder



Autofocus mark



-
- 1** Position your subject within the autofocus marks, and press the Shutter release button halfway.

- The Green lamp next to the viewfinder lights.

- 2** Recompose the picture while keeping the Shutter release button pressed halfway.

- 3** Press the Shutter release button fully to take the picture.


Note:

- If the Green lamp blinks, the focus or exposure is not locked. Check the working distance. (p. 56)

AUTOFOCUS


There are certain conditions where the autofocus may not work properly even when the Green lamp lights when the Shutter release button is pressed halfway. When this happens, try the procedure below or use Manual focus. (p. 71)

① Subjects with low contrast

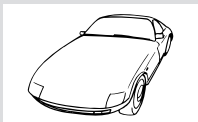

Lock the focus on an object that is at the same distance from the camera as the subject, then aim at the subject to take the picture. (p. 53)

② Subjects with no vertical lines

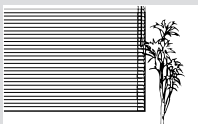

Lock the focus on the subject by holding the camera vertically, then change it to the horizontal position to take the picture. (p. 53)

③ Subjects in excessively bright light




Lock the focus on an object that is at the same distance from the camera as the subject, then aim at the subject to take the picture. (p. 53)

④ Subjects at different distances



Lock the focus on an object that is at the same distance from the camera as the subject, then aim at the subject to take the picture. (p. 53)


⑤ Fast-moving subjects at close distances

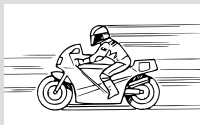

Lock the focus on an object that is at the same distance from the camera as the subject, then aim at the subject to take the picture. (p. 53)

WORKING RANGE

The viewfinder's picture frame shows the area that can be shot for subjects at ∞ . However, the picture area will move lower in the viewfinder as you get closer to the subject, especially with Telephoto shooting.

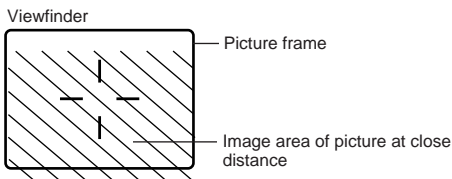

Take pictures at a distance between 8" ~ ∞ .


- Subjects closer than 8" may turn out to be out of focus and incorrectly exposed.
- Using the LCD monitor as a viewfinder makes it easy to take close-up pictures.
- Power consumption increases when the LCD monitor is used.

Working range

Macro mode (p.69)	8" ~ 31"
Standard mode	31" ~ ∞

AE LOCK

You can take a picture of a subject with a different exposure than that set with focus lock.

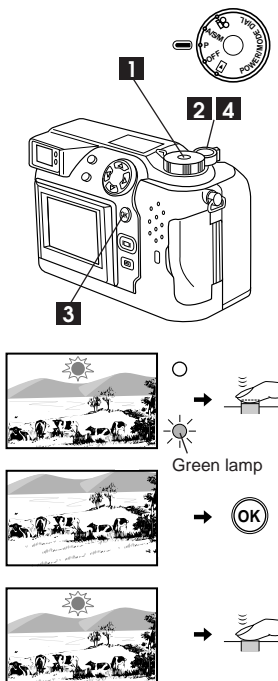

1 Set the Mode dial to P or A/S/M.

2 Position your subject within the autofocus mark, and press the Shutter release button halfway.

3 While keeping the Shutter release button pressed halfway, recompose the picture and press the OK button.

- The exposure is metered and stored in memory.

- If the OK button is pressed again, the new exposure is stored in memory.

4 Press the Shutter release button fully.


- When the Shutter release button is released, the focus lock in step 2 and the exposure stored in memory will both be canceled.

Note:

- If the Shutter release button is released after being pressed halfway, the exposure setting will be canceled even if it was stored in memory.
- If the distance to the subject changes after focus lock is set, the resulting picture will be out of focus.

APERTURE PRIORITY MODE

You can set the aperture manually for the Aperture priority mode. It is especially useful for taking portrait pictures with blurred backgrounds.

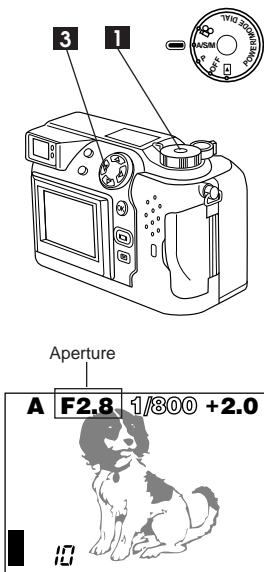

.....

1 Set the Mode dial to A/S/M.

- The LCD monitor turns on automatically, and the aperture setting will be displayed.

2 Select the Aperture priority mode from the Menu. (p. 107)

3 Press the top/bottom arrows on the Jog dial to select the aperture.

 

- ▲ : Increases the value.
- ▼ : Decreases the value.

Note:

- When the flash is set to fire automatically, the shutter speed will not go below 1/30 second.
- When the right exposure cannot be attained, the aperture display will blink and ▲ (overexposure) or ▼ (underexposure) will appear on the LCD monitor.
- Aperture setting is valid only when the Aperture priority mode is selected.
- Unless OFF is selected in All Reset, the setting will be canceled when the power is turned off. (p. 194)

SHUTTER PRIORITY MODE

You can set the shutter speed manually for the Shutter priority mode. Set it to a fast speed to capture a moving object. Set it to a slow speed to express motion.

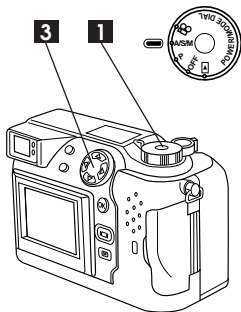


1 Set the Mode dial to A/S/M.

- The LCD monitor turns on automatically, and the shutter speed setting will be displayed.

2 Select the Shutter priority mode from the Menu. (p. 107)

3 Press the top/bottom arrows on the Jog dial to select the shutter speed.

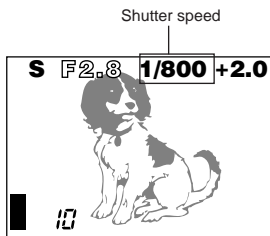

SHUTTER PRIORITY MODE (Cont.)

When the Mode dial is set to A/S/M, ISO is set to 100 automatically. The ISO setting can be selected from 100, 200 or 400. (P. 84)

Changing the ISO setting does not affect the shutter speed setting.


Available shutter speed settings: 1 to 1/800 second.

Note:

- When the right exposure cannot be attained, the shutter speed display will blink and ▲ (overexposure) or ▼ (underexposure) will appear on the LCD monitor.
- Shutter speed setting is valid only when the Shutter priority mode is selected.
- Unless OFF is selected in All Reset, the setting will be canceled when the power is turned off. (p. 194)

MANUAL MODE

You can set the aperture and shutter speed manually in the Manual mode. It is especially useful for taking portrait pictures with blurred backgrounds or expressing motion.

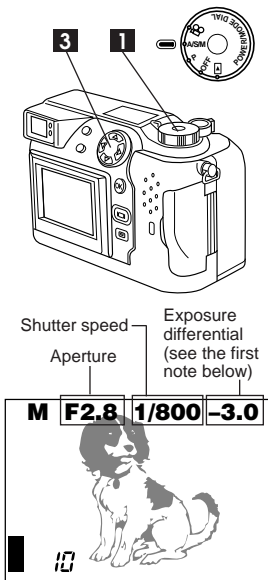

1 Set the Mode dial to A/S/M.

- The LCD monitor turns on automatically, and the aperture and shutter speed settings are displayed.

2 Select the Manual mode from the Menu. (p. 107)

3 Press the right/left arrows on the Jog dial to select the aperture. Press the top/bottom arrows to select the shutter speed.


- The shutter speed can be selected from 16 to 1/800 seconds.

Note:

- The differential (ranging from -3.0 to +3.0) between the exposure determined by the currently selected aperture and shutter speed compared to the exposure level considered optimal by the camera appears in the upper right-hand corner of the LCD monitor.
- If the exposure compensation value is lower than -3.0 or higher than +3.0, the indication will turn red.
- Manual settings are valid only when the Manual mode is selected.
- Unless OFF is selected in All Reset, the setting will be canceled when the power is turned off. (p. 194)

ZOOM

You can select Telephoto or Wide-angle with the 3X zoom lever.

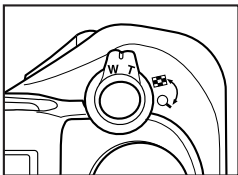

Press the lever forward T for Telephoto shooting.

Press the lever forward W for wide-angle shooting.




Note:

- When used with the Digital zoom mode, you can take an approx. 7.5X zoom photograph. (p. 96)
- Unless OFF is selected in All Reset, the setting will be canceled when the power is turned off. (p. 194)

EXPOSURE COMPENSATION

In addition to automatic exposure, you can also adjust it manually by ± 2 (approx. $1/3$ steps). Adjust $+$ to increase the exposure, and $-$ to decrease the exposure. Confirm the settings by turning on the LCD monitor.

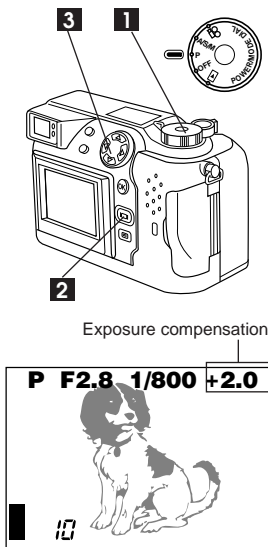


1 Set the Mode dial to P or A/S/M.

 
- For A/S/M, the Shutter priority mode or Aperture priority mode must be selected. (p. 107)

2 When P is selected, press the LCD monitor ON/OFF button to turn on the LCD monitor.

- With A/S/M, the LCD monitor will turn on automatically.
- The exposure setting will be displayed.

3 Press the right arrow on the Jog dial for $+$ adjustment and the left arrow for $-$ adjustment.

- When set to a value other than 0,  is displayed on the control panel.




Note:

- Not available in the Manual mode.
- Unless OFF is selected in All Reset, the setting will be canceled when the power is turned off. (p. 194)
- Although the brightness of the LCD monitor can be changed with the exposure compensation, it may not appear to change when the subject is mostly dark. In such a case, display the recorded picture on the LCD monitor to check its brightness.
- The exposure compensation may not work properly when shooting with the flash.

USING THE FLASH

 When the shutter button is pressed halfway, the orange lamp next to the finder lights up when use of the flash is necessary. Select a flash mode to match the photographic conditions and purpose.



If a setting other than Auto-Flash is selected, the flash mode is displayed on the control panel.

You can select the following flash modes with each press of the Flash mode button.

Flash mode	Use
Auto-Flash (p. 65) ↓	Automatically fires in low-light and backlight conditions.
Red-Eye Reducing Flash (p. 65) ↓	Significantly reduces the phenomenon of "red-eye" (subject's eyes appearing red).
Fill-In Flash (p. 66) ↓	Fires regardless of available light.
Flash Off (p. 66) ↓	Never fires.

Flash working range:

Wide-angle : Approx. 31" ~ 12.5 ft

Telephoto : Approx. 8" ~ 12.5 ft

Note:

- The amount of flash light can be compensated for to match the picture subject. (p. 86)
- The flash is being charged while the Orange lamp is blinking. Wait until the Orange lamp goes off to take the picture.
- When using the flash in the Macro mode, especially with Wide-angle shooting, the flash may not have the proper effect. Confirm the result using the LCD monitor.
- See page 90 for using an extension flash.
- The main flash cannot be used in the Sequence mode. (p. 74)

AUTO-FLASH

The flash will fire automatically in low-light and backlight conditions.

Viewfinder



Backlighting correction mark

When you take a picture that is backlit, position the subject within the backlighting correction marks to fire the flash.

 
RED-EYE REDUCING FLASH



This mode significantly reduces the phenomenon of “red-eye”.



Control panel



Note:

- The camera emits pre-flashes before the regular flash.
- It takes about a second before the Shutter is released.
- Performance may be limited when the subject is not looking at the pre-flashes from right in front of the camera, or due to medication/alcohol intake or individual characteristics.

USING THE FLASH (Cont.)

 
FILL-IN FLASH (FORCED ACTIVATION)



The flash fires regardless of available light. For example, this mode can be used to brighten up the subject's shaded face. Another use of this mode is to correct the color shift produced by artificial lights (eg. fluorescent light).



Control panel



Note:

- Use this mode within the flash working range. (p. 64)
- It may not have the desired effect under excessively bright light.

 
OFF (FLASH OVERRIDE)



The flash does not fire even in low-light conditions. Use this mode in situations where flash photography is not desired or is prohibited, or in twilight/night scenes.




Control panel




 

Note:

- Since a slow shutter speed is automatically selected in low-light situations when in the Off mode, the use of a tripod is recommended to prevent blurred pictures caused by camera movement.


SELECTING THE FLASH MODE

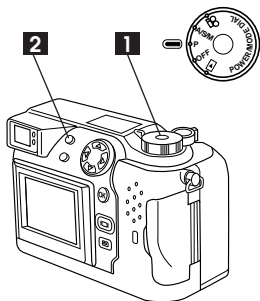

1 Set the Mode dial to P or A/S/M.

2 With each press of the Flash mode button, the flash mode will switch from Auto-Flash to  (Red-Eye Reducing Flash, p. 65),  (Fill-In Flash, p. 66) and  (Flash Off, p. 66).

- The selected flash mode (except Auto-Flash) will appear on the control panel.

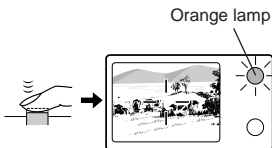

3 If the Orange lamp lights when the Shutter release button is pressed halfway, the flash is ready to fire.

Note:


- Unless OFF is selected in All Reset, the setting will be canceled and reset to Auto-Flash when the power is turned off. (p. 194)

SPOT METERING MODE


The Spot metering mode is used to obtain the right exposure regardless of the backlight. Place the subject in the center of the autofocus marks.

You can select the following modes with each press of the Spot/Macro button.

Digital ESP metering/Autofocus	
↓	
Spot metering mode	
↓	
Macro mode (p. 69)	
↓	
Macro mode + Spot metering mode (p. 70)	

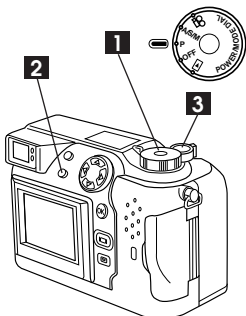

Control panel

 

1 Set the Mode dial to P or A/S/M.

2 Press the Spot/Macro button until appears on the control panel.

- To cancel the Spot metering mode, press the Spot/Macro button several times until disappears.


3 Take a picture.

Note:

- Unless OFF is selected in All Reset, the setting will be canceled when the power is turned off. (p. 194)


MACRO MODE

You can get as close as 8" to your subject. An approx. 2.4" x 3" subject can be photographed almost fully within the frame.

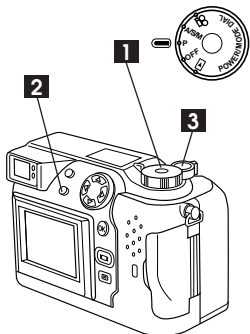


1 Set the Mode dial to P or A/S/M.

2 Press the Spot/Macro button several times until  appears on the control panel.

- To cancel the Macro mode, press the Spot/Macro button several times until  disappears.

3 Take a picture.

 Control panel




Shooting Range: Approx. 8" ~ 31"

Note:



- When using the flash in the Macro mode, the flash may not have the proper effect. Confirm the result using the LCD monitor.
- Using the LCD monitor as a viewfinder makes it easy to take close-up pictures.
- Unless OFF is selected in All Reset, the setting will be canceled when the power is turned off. (p. 194)

MACRO + SPOT METERING MODE

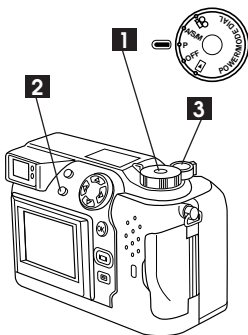Use this mode when you want to use the Spot metering mode and your subject is closer than 31".



 
1 Set the Mode dial to P or A/S/M.

2 Press the Spot/Macro button several times until   appear on the control panel.

- To cancel the Macro + Spot metering mode, press the Spot/Macro button so that the icons disappear.

3 Take a picture.

Control panel




Note:


- Unless OFF is selected in All Reset, the setting will be canceled when the power is turned off. (p. 194)

MANUAL FOCUS

With Manual focus, you can select a pre-adjusted focal length. It is especially useful when quick shooting is required.

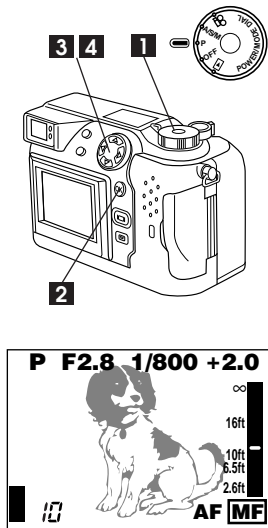

Control panel

 

1 Set the Mode dial to P or A/S/M.

2 Press the OK button to display the focus mode selection screen on the LCD monitor.

 
3 Press the right arrow on the Jog dial to select MF.

- **MF** and the distance indicator appear on the control panel.
- To cancel, press the left arrow on the Jog dial to select AF. When **MF** disappears on the control panel, press the OK button.


4 While looking at the LCD monitor, press the top/bottom arrows on the Jog dial to select the distance.

- The display will be enlarged to make focusing easy.

MANUAL FOCUS (Cont.)



- 5** When the distance indicator is moved below 2.6ft, shorter distances will appear on the LCD monitor.

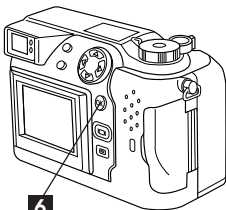

- 6** Press the OK button to save the setting.

















Note:

- The picture may become out of focus when the Zoom lever is pressed after Manual focus is selected. In such a case, readjust the distance using the Jog dial.
- Unless OFF is selected in All Reset, the setting will be canceled and reset to auto focus when the power is turned off. (p. 194)
- The distances on the LCD monitor are for reference only.
- When using the flash, shoot within the flash working range.



STILL PICTURE RECORD MENU

 * Press the Menu button to set the following items when the Mode dial is set to A/S/M or P. (p. 44)


Monitor display	Use
	Using the Sequence mode (p. 74), Selftimer/Remote control (p. 76) or Auto bracket (p. 80).
	Selecting the white balance. (p. 82)
	Selecting the ISO sensitivity. (p. 84)
	Correcting the amount of light from the flash. (p. 86)
	Taking photographs of night views. (p. 88)
	Selecting the extension flash or main flash + extension flash. (p. 92)
	Using the Digital zoom mode. (p. 96)
	Using picture effects. (p. 98)
	Recording sound in the still picture recording mode. (p. 99)
	Taking panorama pictures. (p. 101)
	Formatting the card. (p. 103)
	Making adjustments. [All reset (p. 194), Sharpness (p. 199), TIFF settings (p. 200), SQ settings (p. 202), Beep sound (p. 204), Full-time AF (p. 205), Rec view (p. 207), File number (p. 212), Brightness (p. 215), Date set (p. 34), Meters/feet (p. 217)]
	Selecting the recording mode (SQ/HQ/SHQ). (p. 105)
	Setting Aperture priority, Shutter priority or Manual mode for the Mode dial A/S/M. (p. 107)

SEQUENCE MODE

 In the Sequence mode, the camera takes pictures sequentially while the Shutter release button is pressed.

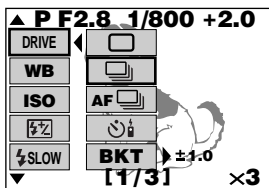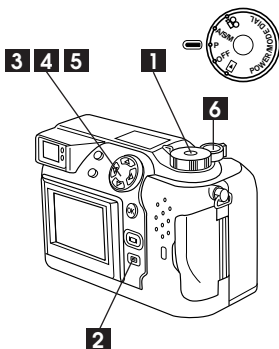



Control panel





1 Set the Mode dial to P or A/S/M.


2 Press the Menu button to display the Menu.

3 Press the top/bottom arrows on the Jog dial to select DRIVE.

4 Press the right arrow on the Jog dial, then press the top/bottom arrows to select  or AF .

-  appears on the control panel.

- When  is selected, the focus, exposure and white balance will be measured for the first frame.

- When AF  is selected, they will be measured for each frame.

5 Press the left arrow on the Jog dial to confirm the setting.

6 If you take a picture without pressing the OK button, the setting will be valid until the Menu is canceled.

- Press the OK button to save the setting and cancel the Menu.


The available sequential shutter speeds and number of pictures that can be taken depend on the selected recording mode. Refer to the table below when using the sequential mode.

Number of Still Pictures that can be Taken in Sequence mode

Recording mode		Number of pictures	Sequential shutter speed (approx. frames/sec.)
TIFF	Entire	Not available	
SHQ	2048 X 1536	Not available	
HQ	2048 X 1536	5	1.2 } 1.8
SQ1	HIGH (High quality)	3	
	NORMAL	7	
	HIGH (High quality)	5	
	NORMAL	11	
SQ2	HIGH (High quality)	6	
	NORMAL	18	
	HIGH (High quality)	15	
	NORMAL	38	

The numbers above are valid when the LCD monitor is set to OFF.

Note:

- The main flash cannot be used in the Sequence mode.
- When using an extension flash, set the speed fast enough to follow the sequential shooting.
- Since the LCD monitor's picture blacks out while taking pictures in the Sequence mode, use the viewfinder to take pictures in this mode.
- Unless OFF is selected in All Reset, the setting will be canceled when the power is turned off. (p. 194)
- This mode cannot be used in the TIFF/SHQ recording mode.
- Since the slowest shutter speed in the Sequence mode is set to 1/30 second to prevent camera movement, the resulting picture may be darker than expected.
- Sequential shooting will continue for as long as the Shutter release button is held down. When the Shutter release button is released, Sequential shooting stops.
- Even if the Sequence mode is switched to another mode after taking sequential pictures, it will not be possible to take another picture until recording in the card finishes.
- The speed will be slower with AF .